



HOW TO CHANGE THE BATTERY

1. WHAT TOOLS DO I NEED?

- Crankarm removal tool
- Bottom bracket tool 16 notch (Shimano Hollowtech)
- Tool for bottom bracket inserts (ISIS)
- Torque wrench
- 2mm hex wrench
- Protective rubber gloves

2. REMOVAL

- 1 Place the bike in the bike stand so you have the access to bottom bracket area.
- 2 Follow the procedures described in [HOW TO CHANGE THE BOTTOM BRACKET](#) and [HOW TO CHANGE THE CONTROLLER](#).
- 3 With only the battery left in the downtube gently slide it out of the tube by holding the cables and slightly rotating the battery.

Note: do not pull on the cables as they may break.

3. INSTALLATION

- 1 Before installation check the inside of the downtube for any objects.
- 2 Align the battery with the downtube and align the cables (hydraulic, derailleur, lamp), so those do not interfere with the battery.
- 3 Gently push the battery inside the downtube.

Note: The battery has to be inserted all the way to the cable ports near the headtube.

- 4 Follow the installation procedures described in [HOW TO CHANGE THE BOTTOM BRACKET](#) and [HOW TO CHANGE THE CONTROLLER](#).
-

In case you have further questions, please don't hesitate to contact us. Your contact persons are:

Janosch Nellen

Customer Experience Manager

Mobile: +32 472 084 609

E-mail: support@bzenbikes.com

www.bzenbikes.com

Dariusz Rokomiński

Administration and Sales Assistant

E-mail: support@bzenbikes.com

www.bzenbikes.com